
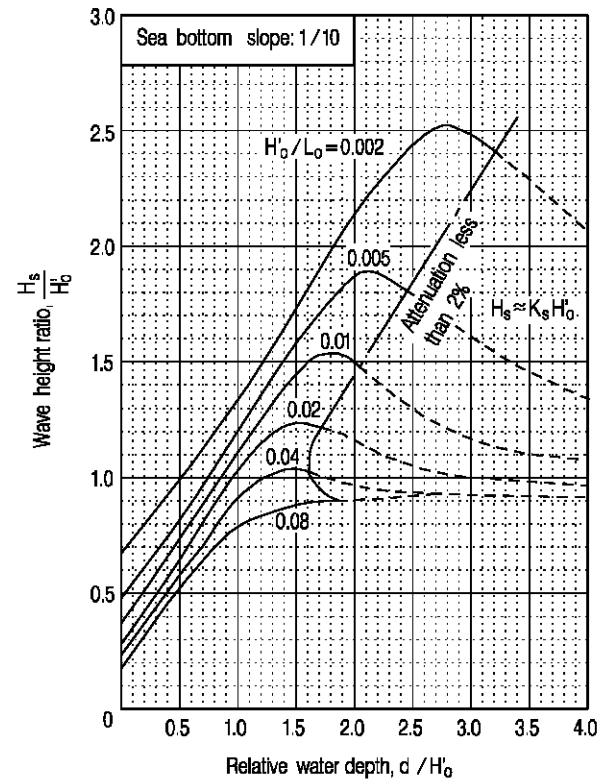


Legend:

- d = water depth
- H_0' = equivalent deepwater wave height
- L_0 = deepwater wavelength
- $\tan \theta$ = slope of seabed



Source: Reproduced from "Random Seas and Design of Maritime Structures" by permission of Prof. Y. Goda

Figure A1 – Diagram of Nonlinear Wave Shoaling

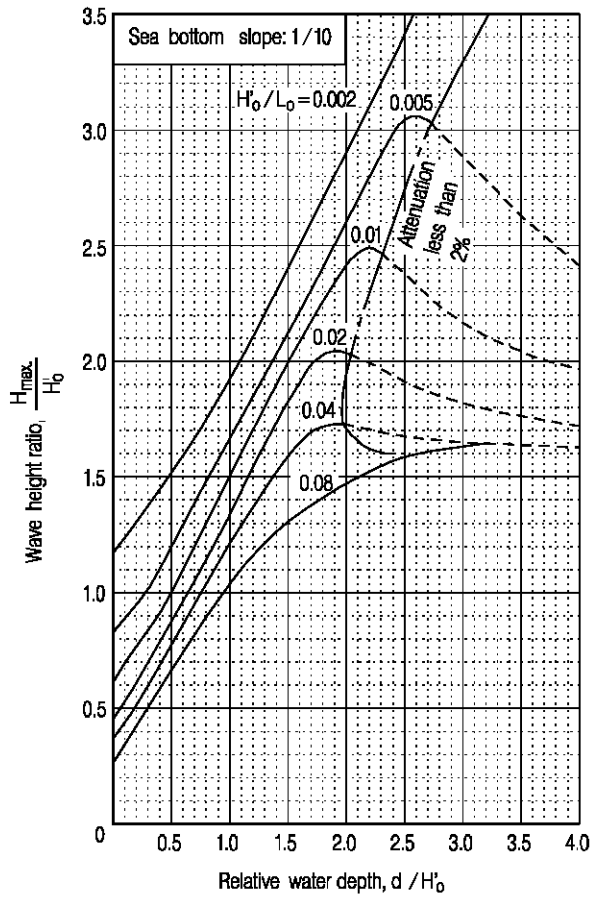



Source: Reproduced from "Random Seas and Design of Maritime Structures" by permission of Prof. Y. Goda

Figure A2 – Estimation of Wave Height in the Surf Zone (Sheet 1 of 4)

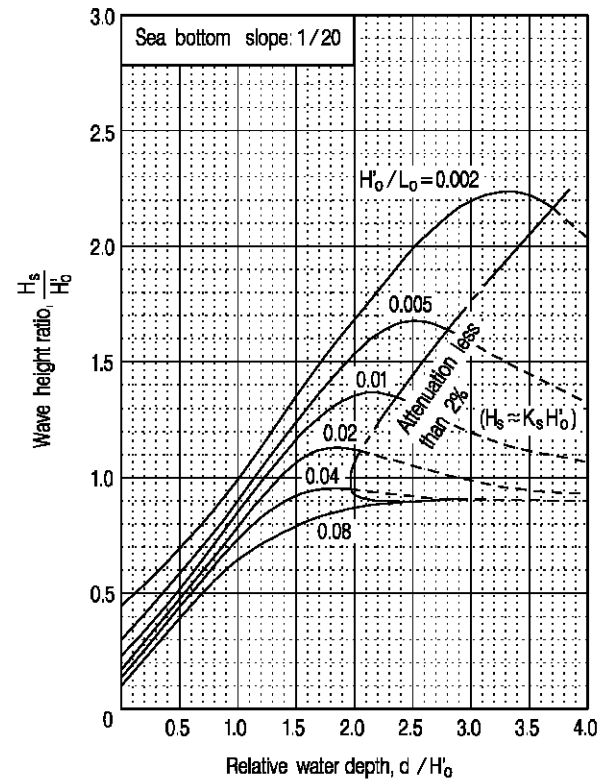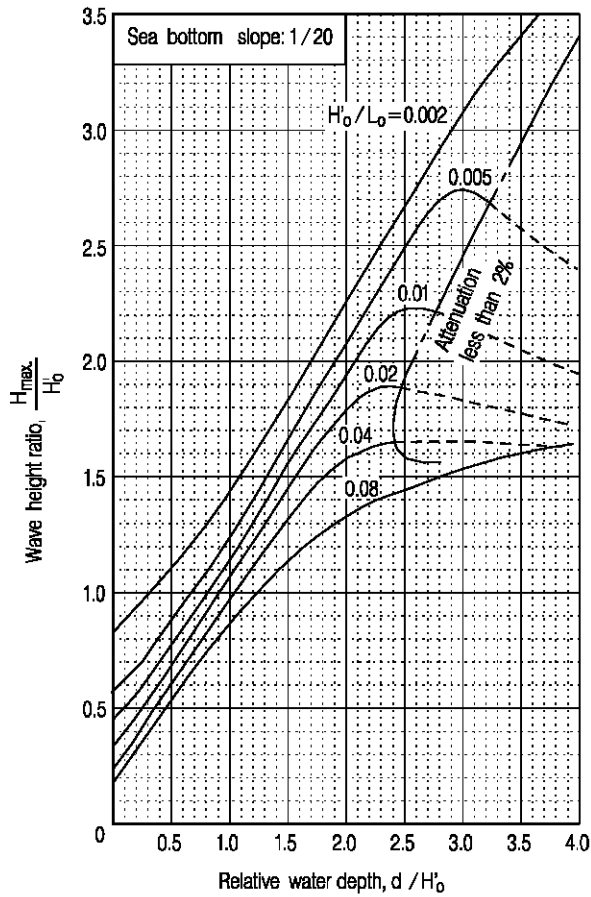



Source: Reproduced from "Random Seas and Design of Maritime Structures" by permission of Prof. Y. Goda

Figure A2 – Estimation of Wave Height in the Surf Zone (Sheet 2 of 4)

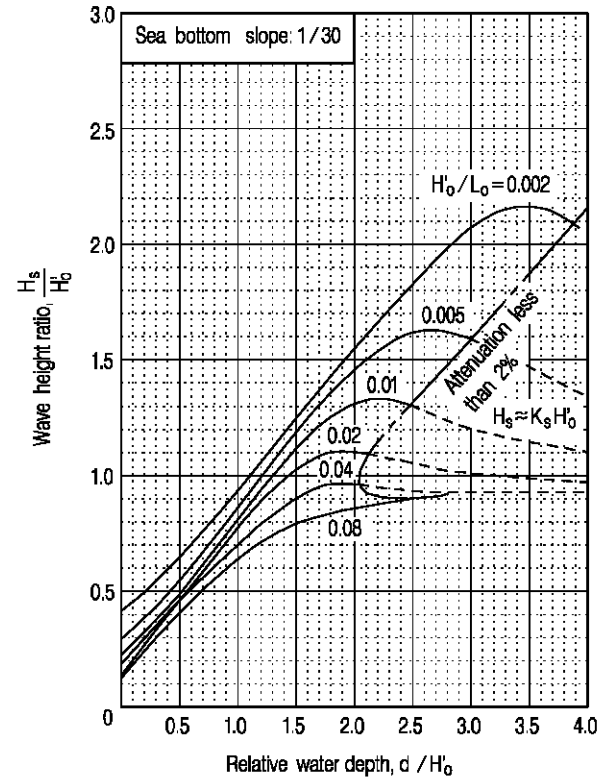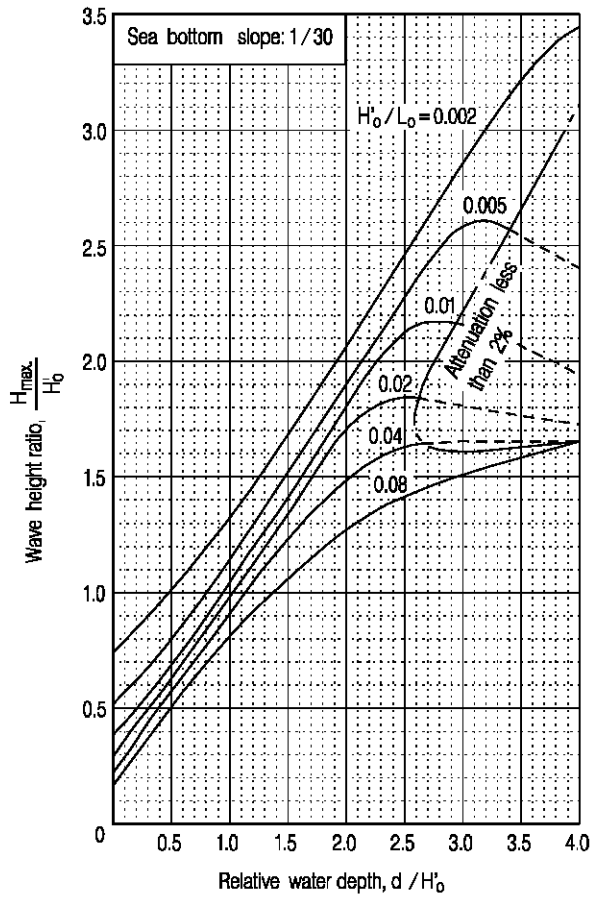

Source: Reproduced from "Random Seas and Design of Maritime Structures" by permission of Prof. Y. Goda

Figure A2 – Estimation of Wave Height in the Surf Zone (Sheet 3 of 4)

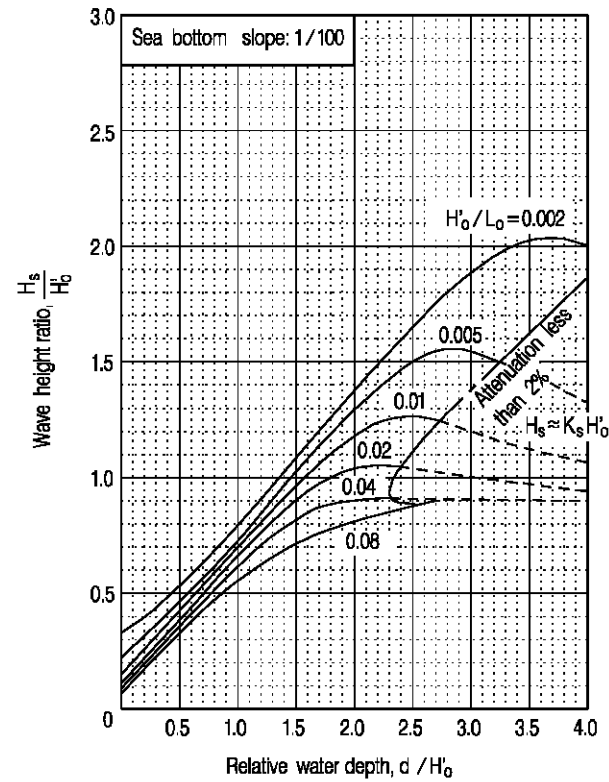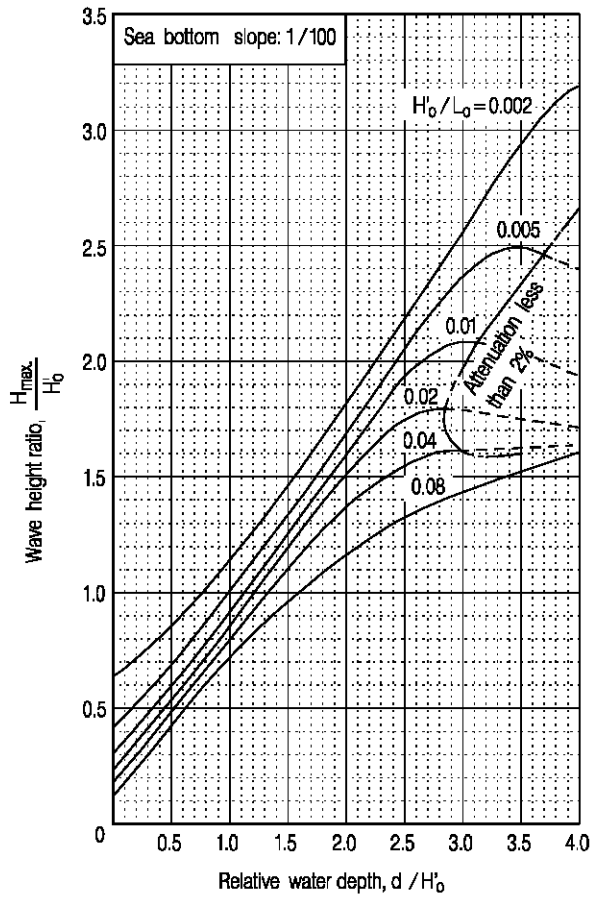

Source: Reproduced from "Random Seas and Design of Maritime Structures" by permission of Prof. Y. Goda

Figure A2 – Estimation of Wave Height in the Surf Zone (Sheet 4 of 4)

